## **INSTALLATION GUIDE**

# Connect your building automation system with wireless BACnet





# For installation, no BACnet cables are needed.



You need this for installation. Choose either W-BACnet DIN rail or W-BACnet wall mount.



The LumenRadio device next to the BACnet master (client) can serve as your gateway, with both DIN rail and wall mount options available.

# **GATEWAY SET-UP**

### A. DIN rail



	1	2	3	4
9600 baud	OFF	OFF	-	-
19200 baud	OFF	ON	-	-
38400 baud	ON	OFF	-	-
76800 baud	ON	ON	-	-
No parity	-	-	OFF	-
Even parity	-	-	ON	-
1 stop bit	-	-	-	O
2 stop bit	-	-	-	0
Use local serial configuration set on Node				
Use Gateway ser	ial config	uration o	n Node	



# Set your Baud rate, stop bit and parity on the gateway (A or B).







A - Move the switch to "COMM" or B - Move the switch to ". Continue by installing the LumenRadio node next to your field devices, starting with the one closest to your gateway.







**Connect the LumenRadio device with chosen device** (zone controller). Optionally, set a local Baud rate.





### Ex. Node to room controller



Place the LumenRadio device preferably <u>above</u> the chosen device (room controller) and connect. Optionally, set a local Baud rate.







# The lights on your node will now sweep in blue.



When the lights start blinking green, the node has found the gateway. This can take up to five minutes.





# Go back to the gateway.



A - Move the switch to "GATEWAY" or B - Move the switch to "□"





The devices blink yellow entering secure mode. This may take up to 5 minutes.





# Now you have a wireless connection!



To use the W-BACnet app, press the button on the gateway three times so that it blinks blue twice and you are ready to connect.



Verify your installation in the app. For a detailed overview, select Network Map.





Learn more at www.lumenradio.com