

Tested DALI-2 certified occupancy sensors

DALI-2 compliant sensors can be used together with AirGlow for scene triggering. It is possible to use a DALI-2 sensor at the same time as a DALI LED driver, AirGlow will prevent data collisions on the DALI bus.

If a DALI-2 occupancy sensor is used it will need to be activated in the "AirGlow Configuration" view in the app before use.

AirGlow is designed to work with DALI-2 part 303 compliant occupancy sensors, please refer to the DALI alliance webpage for a full list of DALI-2 part 303 certified occupancy sensors.

<https://www.dali-alliance.org/>

Note that DALI-2 occupancy sensor is supported from FW version 1.3.4 and app version 1.4.0.

Name	Manufacturer	Zhaga Book 18	DALI-2 certified	D4i certified	Notes
PSensor SSI 31 2xPIR 8DP DG	Tridonic	Yes	Yes (incl. 303)	Yes (Type B)	Bus powered
SR-DA9033A-MW	Sunricher	Yes	Yes (incl. 303)	Yes (Type B)	24V powered
PD4N-BMS DALI-2	B.E.G.	No	Yes (incl. 303)	No	Bus powered
LC-Mini 120-BMS DALI-2	B.E.G.	No	Yes (incl. 303)	No	Bus powered
LUMAWISE Motion	TE Connectivity	Yes	Yes (incl. 303)	Yes (Type B)	Bus powered. The integrated application controller must be disabled before use.