



Disabling Driver Signature Enforcement In Windows 8 Temporarily

Note: Please have the Co-existence dongle plugged to your PC.

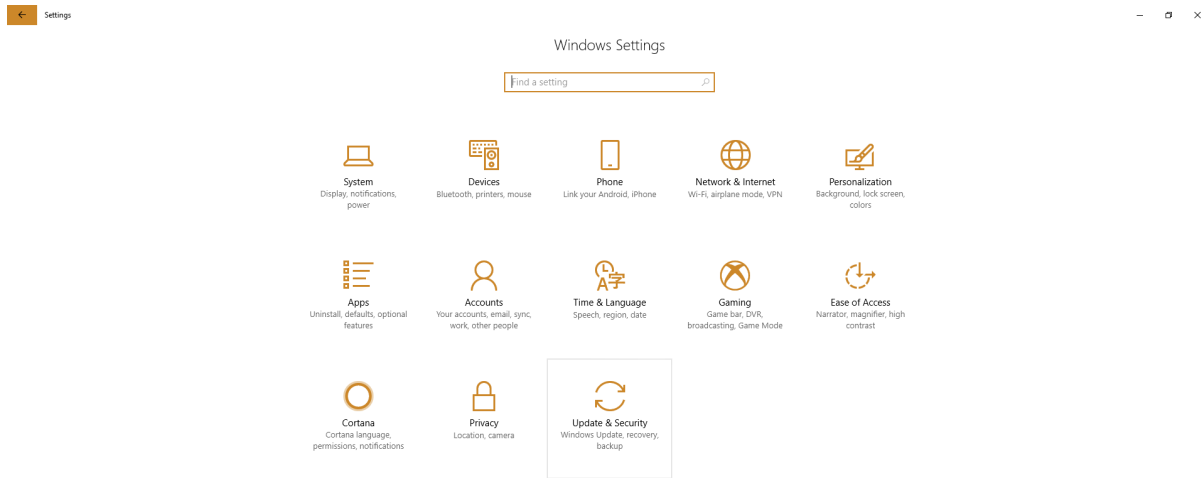


Step 1. Go to the left bottom corner of the desktop and click in the menu. When it's there click on the gear icon with the title "Settings".

Step 2. Now click on the entry "Update & Security", then click on the entry "Recovery".



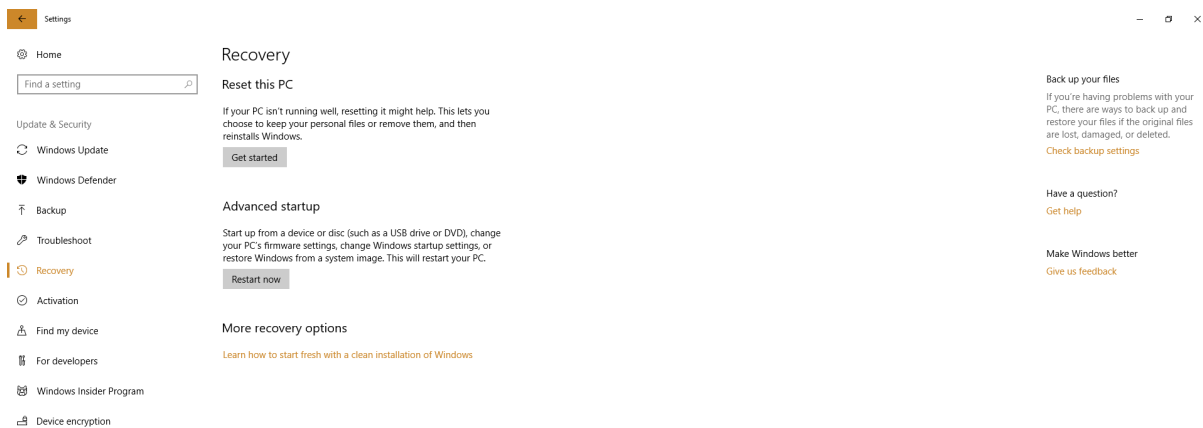


Step 3. Click in "Restart now".

Step 4. Wait for the menu to turn up.

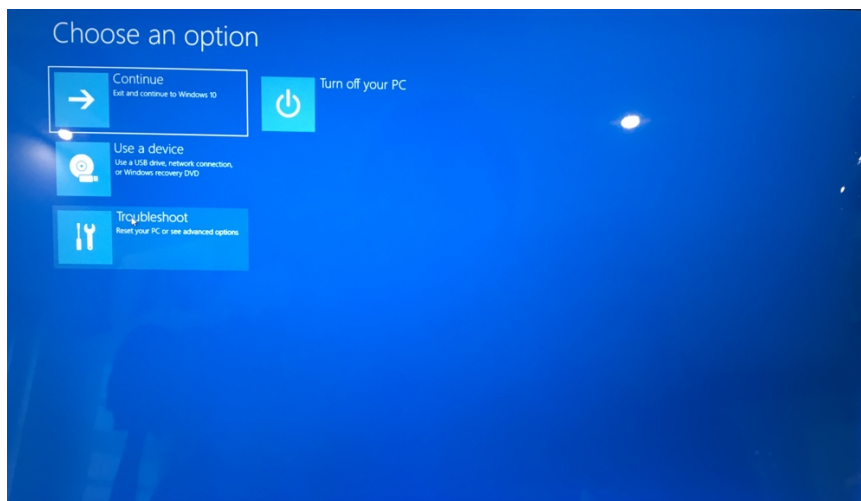

Step 5. Now click “Troubleshoot”, then “Advanced Options” and after that click “Start up Settings”.

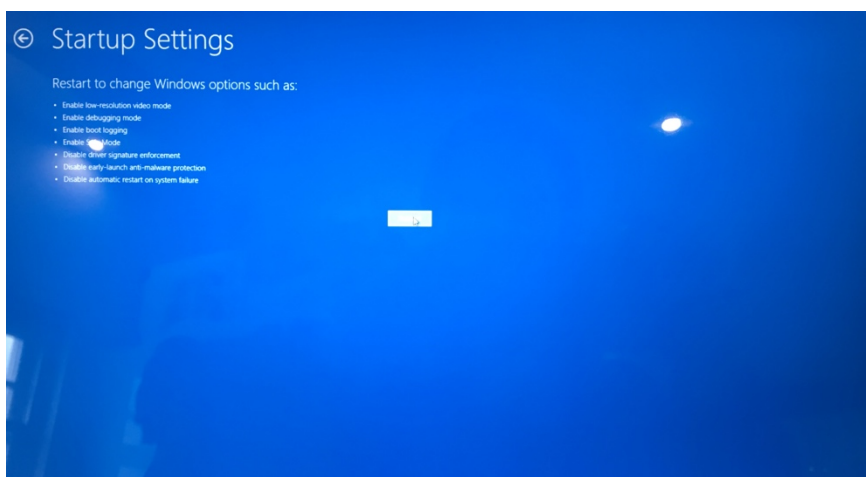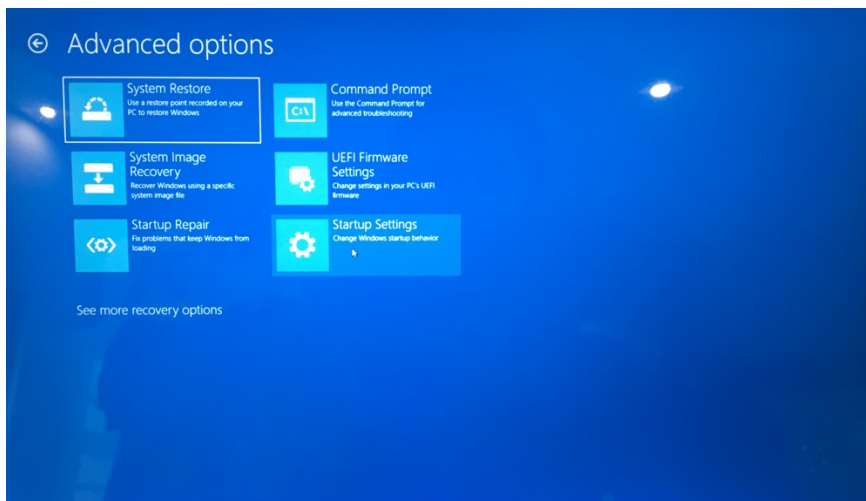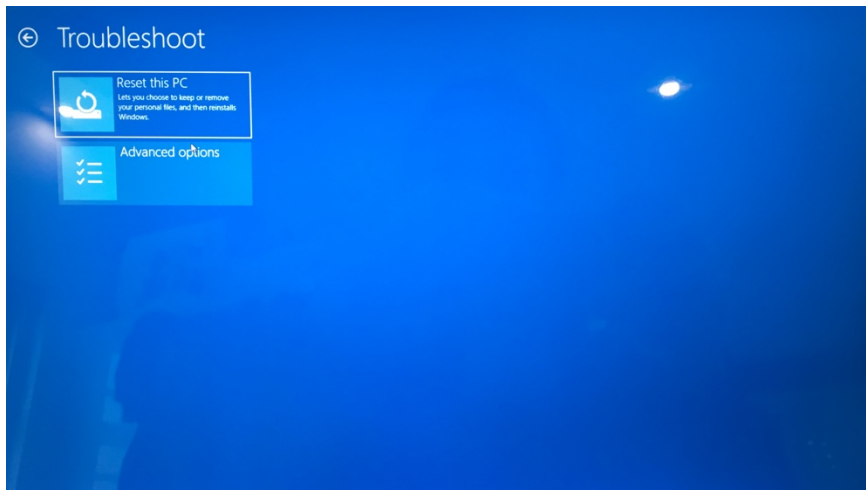

Step 6. Click on “Restart” and wait for the computer to reboot.

Step 7. In the menu that appears, select option 7 (Disable driver signature enforcement).

Once you did this you will be able to install unsigned drivers, just click “Install this driver” software anyway and this will install your driver.

